



Orchard Audio

## Starkrimson® Mono Premium Instructions

### Notes:

- Do not power up or operate the amplifier without speakers or a load connected.
- Due to the bridged amplifier design, both speaker terminals are hot when the amplifier is on.
  - **Warning - High Voltage**
  - Do not connect either speaker terminal to GND or EARTH
  - When connecting to subwoofer's high-level input(s), double check this is supported. Contact us if not sure.
- The amplifier uses a universal AC input power supply and will function with all voltages between 85 and 264 VAC.
- No user-serviceable parts – tampering with the amplifier will void the warranty

***For best performance place the amp(s) as close as possible to the speaker(s) and use very short speaker cables.***

### To Turn the Amplifier On:

1. Connect speaker
2. Connect XLR input
3. Make sure the power switch is in the off position (0).
4. Connect power cord
5. Turn the power switch to the on position (I).

### To Turn the Amplifier Off:

1. Turn the power switch to the off position (0).
2. Wait at least 15 seconds
3. Remove other connection(s) if needed.

***Improper powerup or power down of the amps may cause damage and this damage will not be covered under the warranty.***



*Orchard Audio*

**How do you like them apples?**